

Floataway Chair Eye bolt instructions

N.B. The use of an eye bolt is only necessary when the rope can not be tied directly to the hanging point, the hanging point is not visible or the diameter of the hanging point is too large.

1. Select a suitable place where you want to install your hardware. Check that the timber is substantial enough to take the weight. A ceiling joist should be a minimum of 4 x 2 inches. If you are not sure that the timber or hanging point is safe seek professional advice.
2. Mark the centre of the joist, drill a pilot hole approximately 2 - 3 inches deep using a 5/16 inch drill bit.
3. Screw the eye bolt in until the threads are no longer visible. The use of a lever or wrench may be helpful to turn eye bolt in clockwise direction.

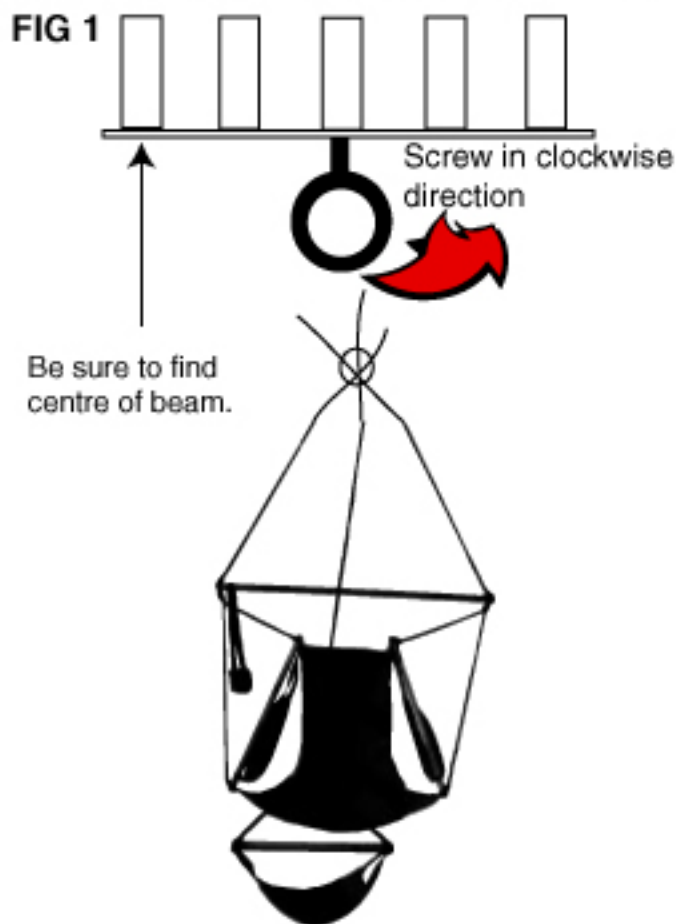


FIG 2 To add the extension rope

a. Holding the 2 pieces of rope from the main chair (not the footrest), at the desired hanging point, simultaneously make a loop. Make sure the 2 pieces are equidistant from the main spreader bar in order to balance the chair. this may take several attempts to get correct position.



b. Wind the ends of the rope in a corkscrew motion back down the rope.



c. Take the 2 ends and thread them through the loop, at least 6 inches of the ends should be showing after the loop.



Push the coil upwards to close the loop onto the rope and S Hook, therefore securing the knot. The knot can be released by simply pushing the ends of the rope back through the loop.

d. The same system is used for the footrest. A hanging height level to the seat of the chair is recommended.

NB. Do Not spin or swing in the Chair or footrest. The eye bolt may loosen and fail.

Important.

The end consumer is ultimately responsible for verifying proper installation of the eye bolt according to our guidelines explained here within.

The manufacturer cannot assume any responsibility, special, indirect, or consequential damages, or contingent liability for use of this product in a manner not expressly intended by the manufacturer.

The Floataway Chair™ maximum weight limit is 250 lbs. It is recommended that the seat should be suspended no higher than 15 inches from the ground.

The Chair may fade after long periods in sunlight.